
A) Attach Casters to Base with (3) Nuts & Bolts for each.

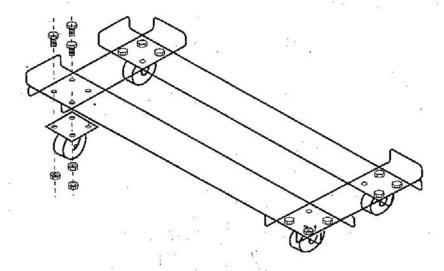

 Place Bin firmly on Base and secure down with 2 Straps and remaining Nuts and Bolts.

